

Achtung! U-Kabine zuerst auf Wanne fixieren / D'abord fixer cabine en U sur le receveur! / Fix U-shaped enclosure on tray first. / Per prima cosa fissare la cabina ad "U" sulla vasca!
 ¡Atención! Primero fijar la cabina U en la bañera. / U-kabine eerst op douchebak fixeren. / POZOR: U - kabinu nejdrive připevnit na vanu.
 UWAGA! Kabinę U należy najpierw ustawić na brodziku / ВНИМАНИЕ! Кабину-U формы вначале закрепить на поддоне

D **Montageanleitung**

Technische Änderungen vorbehalten.

F **Instruction de montage**

Toutes modifications techniques réservées.

GB **Assembly instructions**

We reserve the right to introduce technical changes without notice.

I **Istruzioni di Montaggio**

Salvo variazioni tecniche.

E **Instrucciones de montaje**

Excepto modificaciones técnicas

NL **Montagehandleiding**

Technische wijzigingen voorbehouden.

CZ **Montážní návod**


Technické změny vyhrazeny.

PL **Instrukcja montażu**

Zmiany techniczne zastrzeżone



RUS **Монтажная инструкция**



Технические изменения исключаются

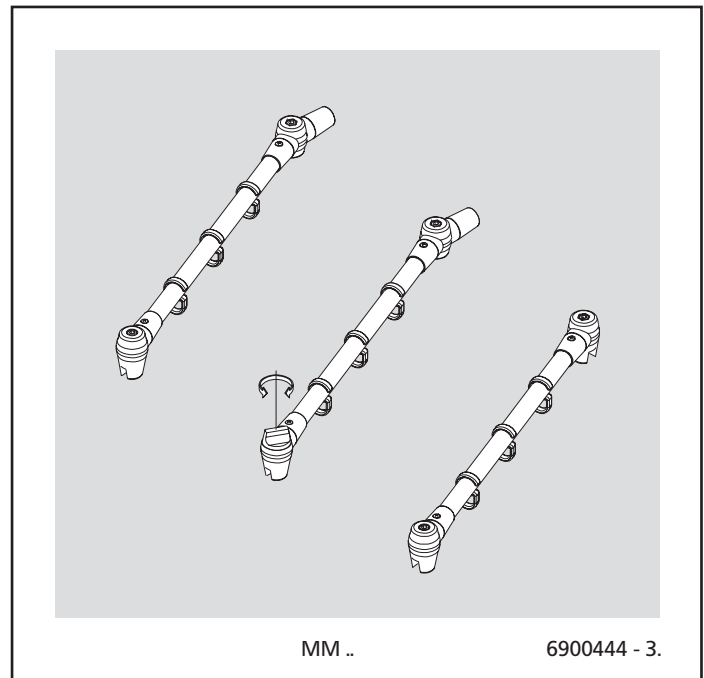



MM ..

6900444 - 3.

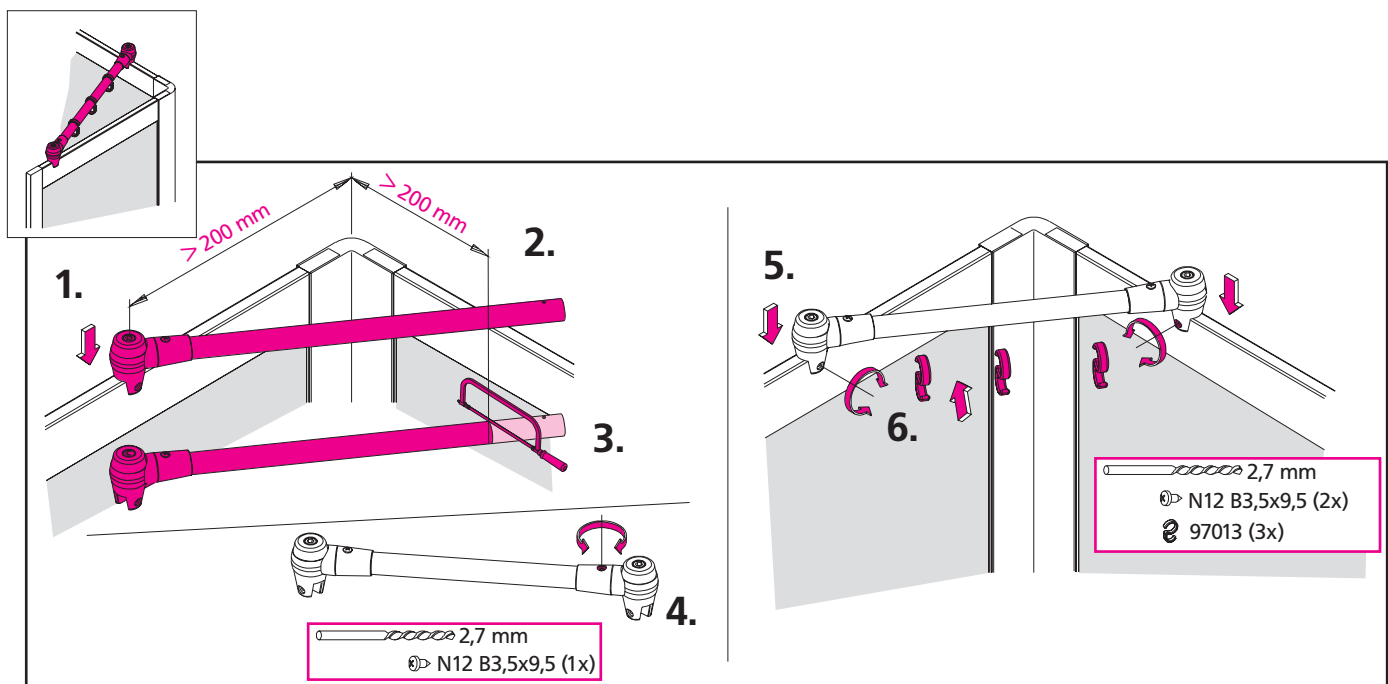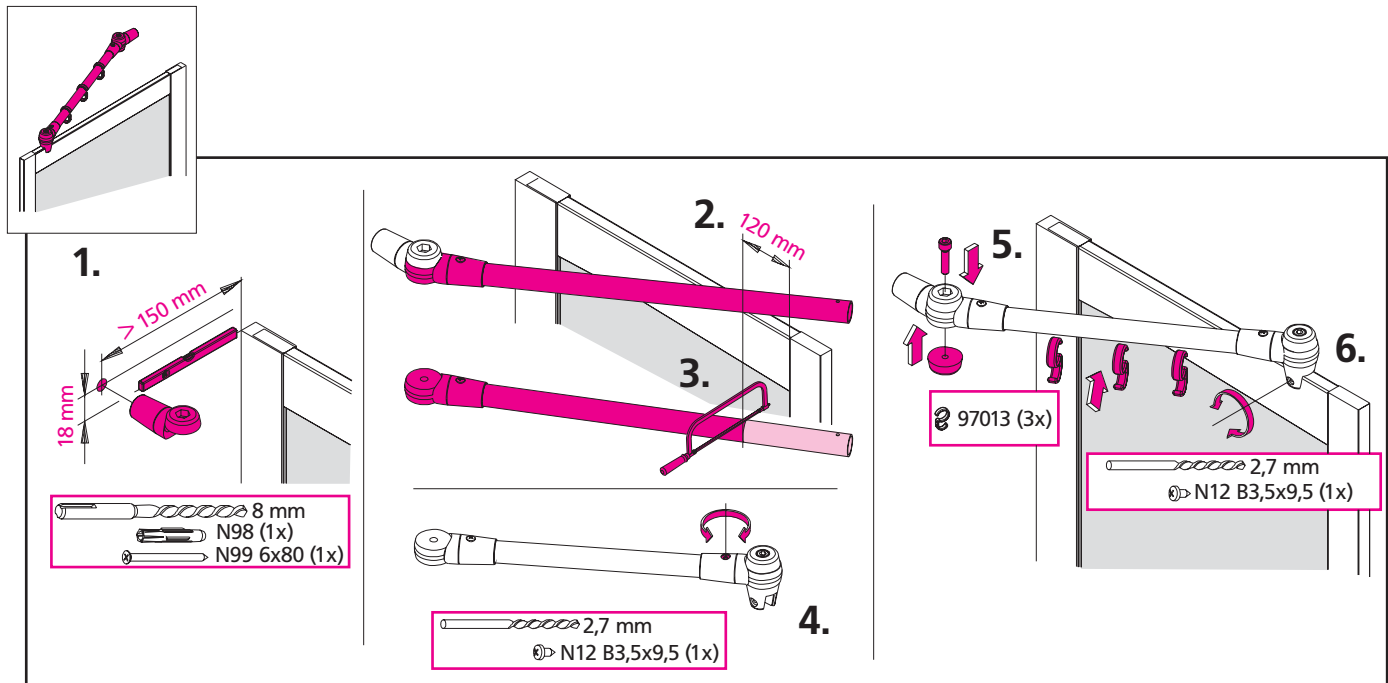


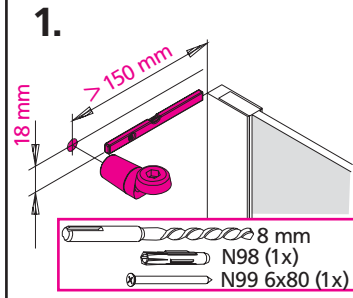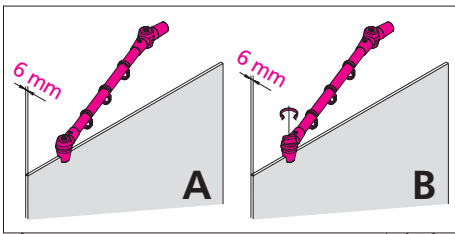


- 8 mm
- N98 (1x)
- N99 6x80 (1x)

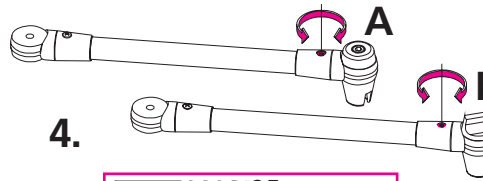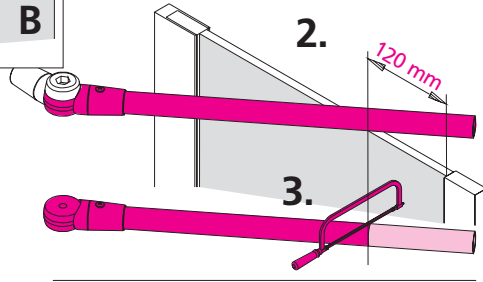



- 2,7 mm
- N12 B3,5x9,5 (1x)

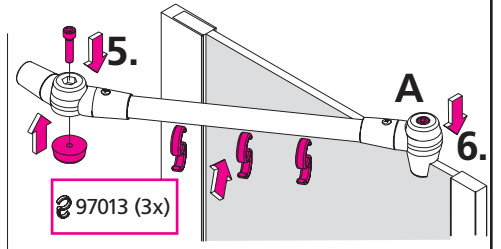



- 97013 (3x)

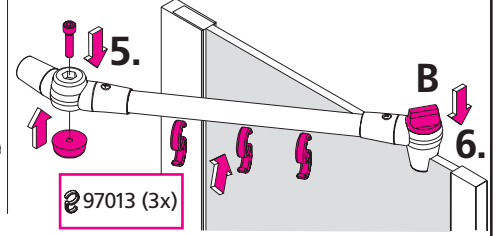


- 97013 (3x)

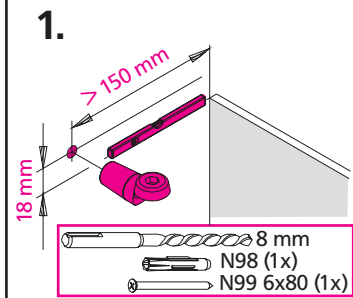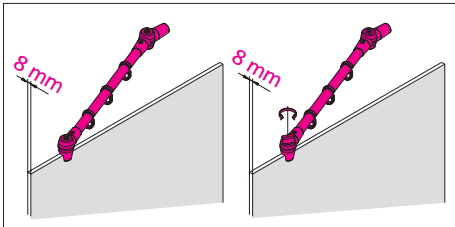


- 8 mm
- N98 (1x)
- N99 6x80 (1x)

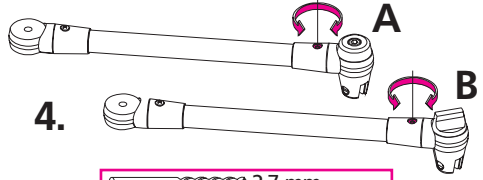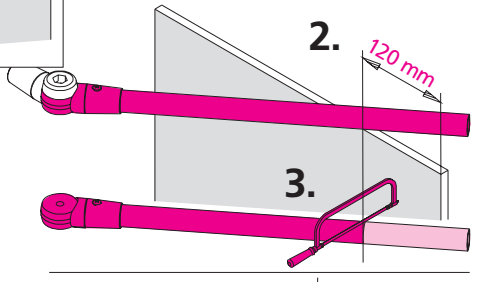



- 2,7 mm
- N12 B3,5x9,5 (1x)

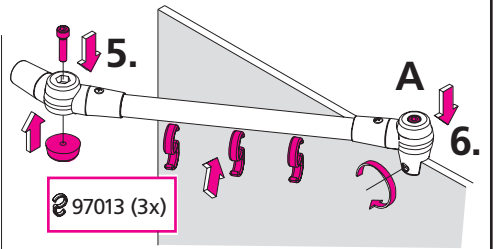


- 97013 (3x)

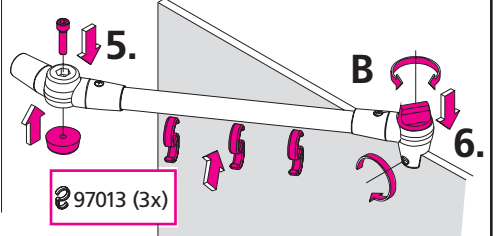


- 97013 (3x)

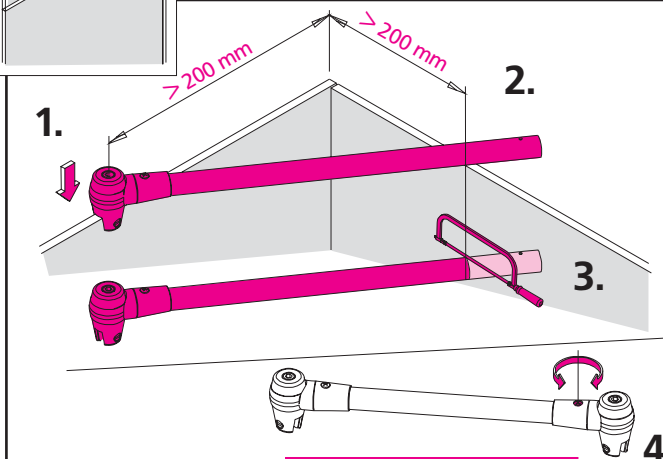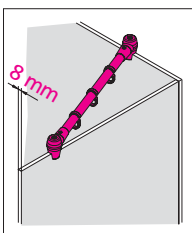

- 2,7 mm
- N12 B3,5x9,5 (1x)

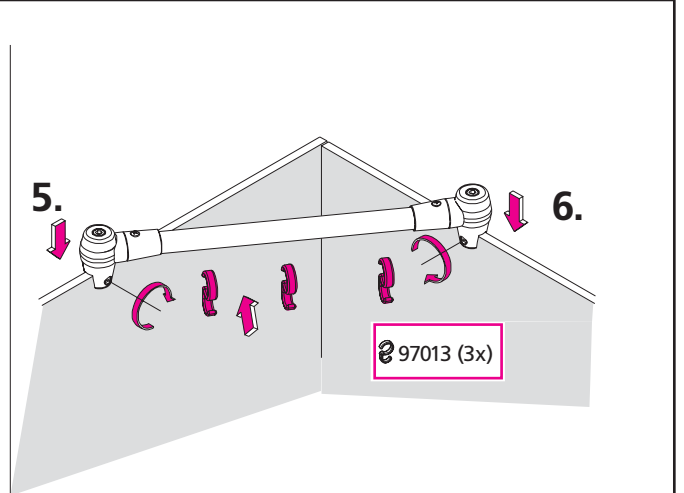


- 97013 (3x)

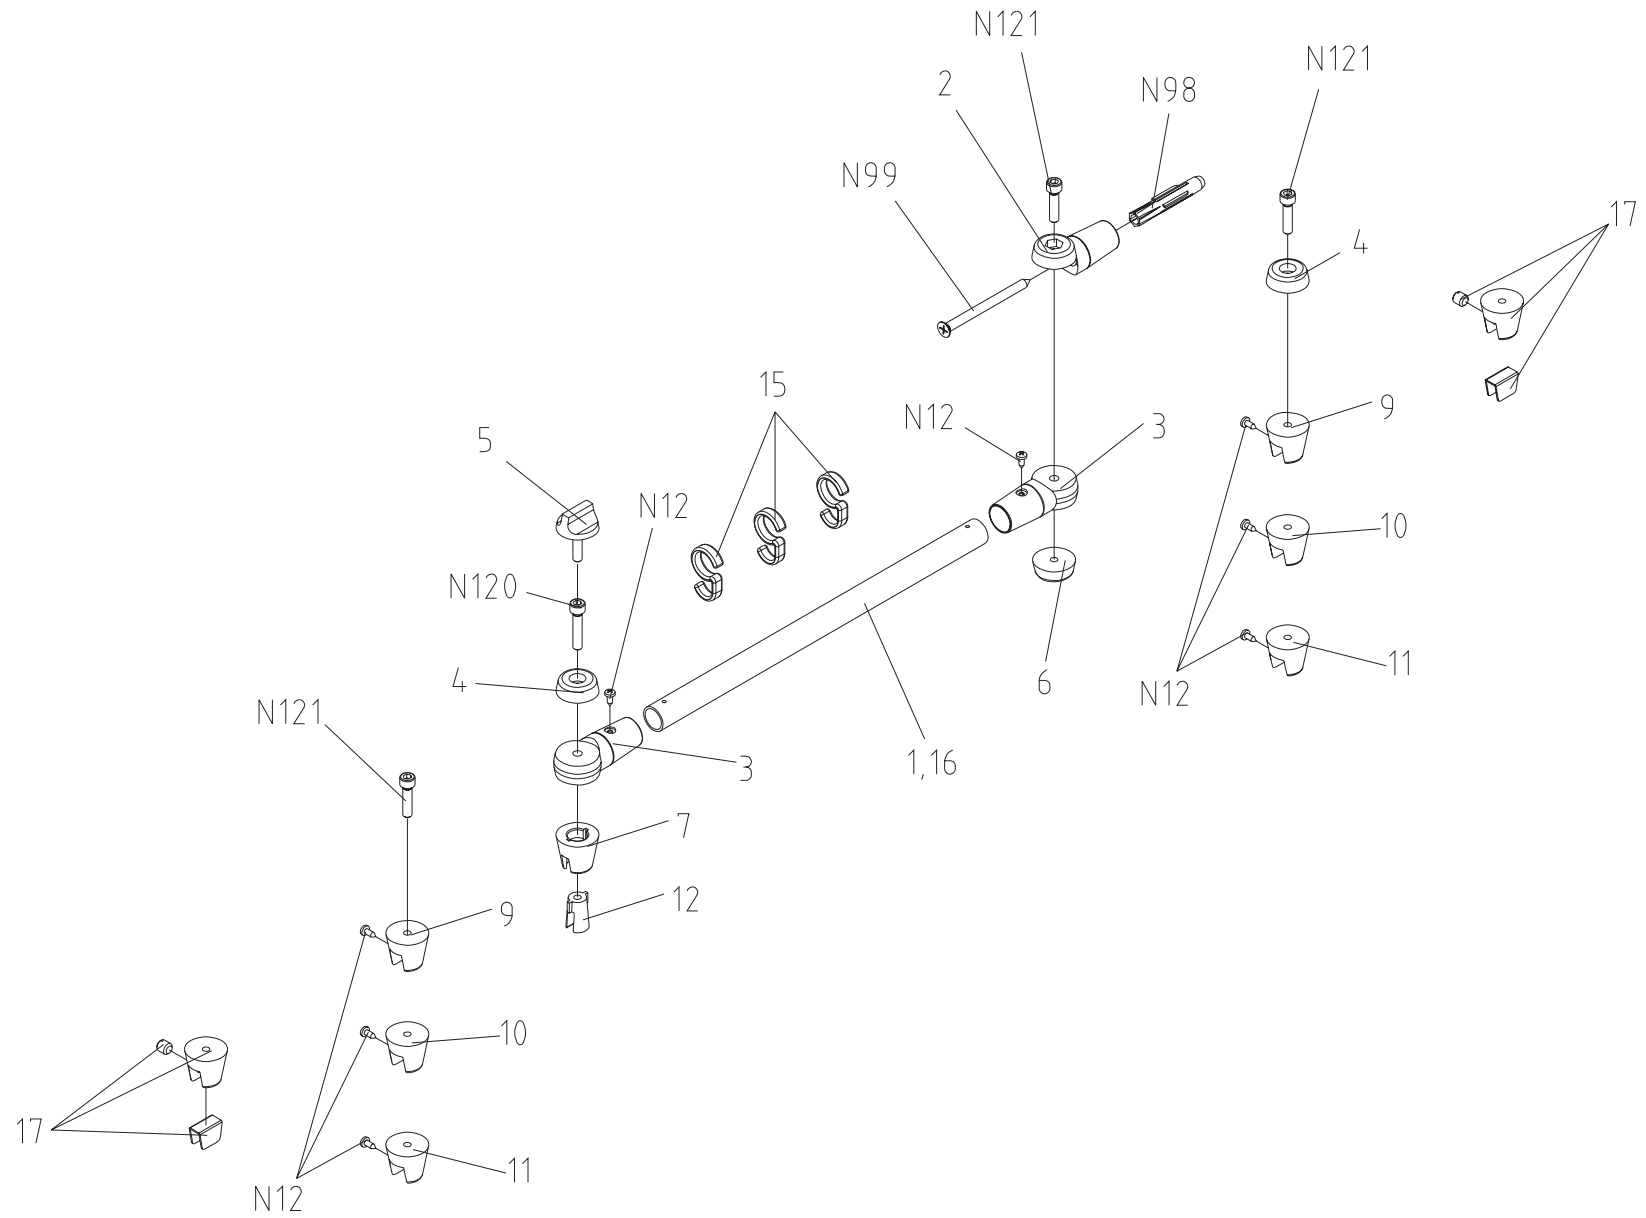

**Ersatzteilliste / Liste des pièces de rechange / Spare parts list / Lista dei ricambi
lista de repuestos / Onderdelenlijst / Seznam náhradních dílů
Lista części zamiennych / Лист запасных деталей**

Pos.-Nr. N°pos. Item No. N. Pos. no.de posición Pos.-nr. číslo pozice Nr poz. Поз.-№	Bestell-Nr. No. Parts No. N. ricambio no. de pedido Nr. číslo objednávci Nr zam. Заказ-№	Menge Nombre Quantity Quanita Cantidad Aantal Počet Ilość Количество										
		MMWTF (Glas 6 mm)	MMWTB (Glas 6 mm)	MMWTF (Glas 8 mm)	MMWTB (Glas 8 mm)	MMTTF (Glas 8 mm)	MMWTF (Profil 10 mm)	MMWTF (Profil 12 mm)	MMWTF (Profil 13 mm)	MMTTF (Profil 10 mm)	MMTTF (Profil 12 mm)	MMTTF (Profil 13 mm)
01	8221 A	1	1	1	1	1	1	1	1	1	1	1
02	97003	1	1	1	1	--	1	1	1	--	--	--
03	97004	2	2	2	2	2	2	2	2	2	2	2
04	97005	1	--	1	--	2	1	1	1	2	2	2
05	97015	--	1	--	1	--	--	--	--	--	--	--
06	97006	1	1	1	1	--	1	1	1	--	--	--
07	97007	1	1	--	--	--	--	--	--	--	--	--
09	97009	--	--	--	--	--	1	--	--	2	--	--
10	97009	--	--	--	--	--	--	1	--	2	--	--
11	97009	--	--	--	--	--	--	1	--	--	--	2
12	97010	1	1	--	--	--	--	--	--	--	--	--
15	97013	3	3	3	3	3	3	3	3	3	3	3
16	9506 A	1	1	1	1	1	1	1	1	1	1	1
17	97016 BG	--	--	1	1	2	--	--	--	--	--	--
N12		4	4	4	4	4	4	4	4	4	4	4
N98		1	1	1	1	1	1	1	1	1	1	1
N99		1	1	1	1	1	1	1	1	1	1	1
N120		1	--	--	--	--	--	--	--	--	--	--
N121		1	1	2	1	2	2	2	2	2	2	2


Zubehör Accessoires Fittings Accessori Accesorios Toebehoren Příslušenství Osprzęt Принадлжности

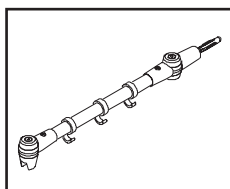


97013 3x




N12 B3,5x9,5 2x




N98 8mm 1x



N99 6x80 1x

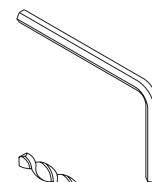

SW5 1x

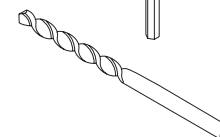

2,7 mm 1x